


# INSTALLATION INSTRUCTIONS



## ROTO-LITE, INC.® 120V Spotlight

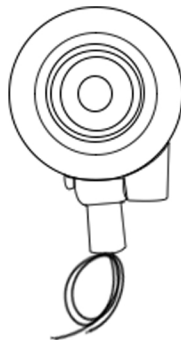

**CUSTOMER SUPPORT**

1-760 863-5800 • Monday-Friday 7:00AM-3:00PM • [info@Roto-LiteInc.com](mailto:info@Roto-LiteInc.com)



## IMPORTANT READ BEFORE INSTALL


To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

### Safety & Installation:

1. Verify that the electrical power is OFF before and during installation and maintenance.
2. Lighting system must have a grounding conductor.
3. Make sure system voltage matches 120 volt spotlight.
4. Suitable for wet locations.
5. Use wire rated for at least 90°C or 194°F.


## INSTALL – DIG HOLE FOR STAKE & CONDUIT

- 1) Dig a hole for the stake and the incoming conduit. Run conduit into the bottom of the ground stake as shown

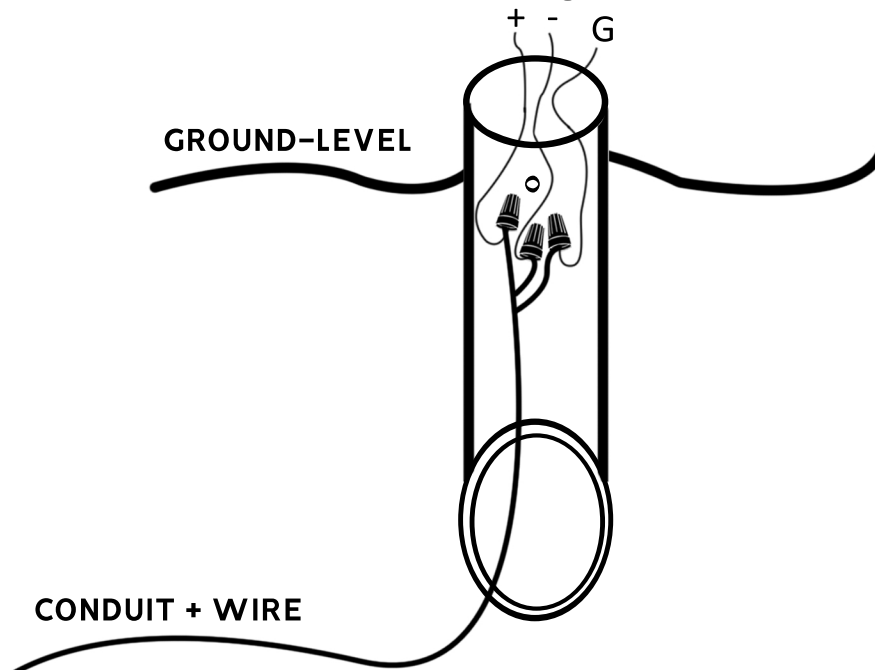


## INSTALL – REMOVE STAKE CAP

2) Remove stake cap by removing the two screws in the stake

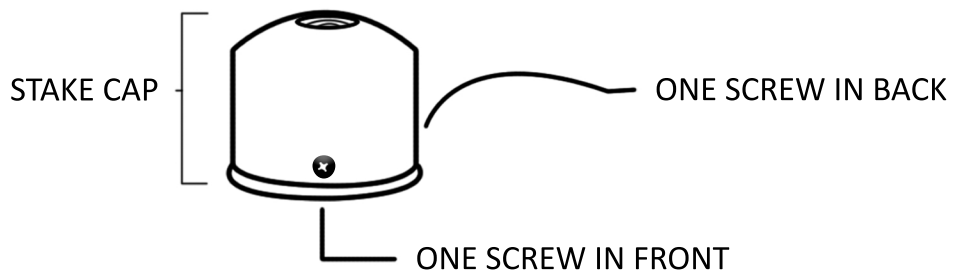


## INSTALL – HAMMER STAKE TO FIT TIGHTLY IN GROUND

3) Hammer the stake down if needed before making any connections

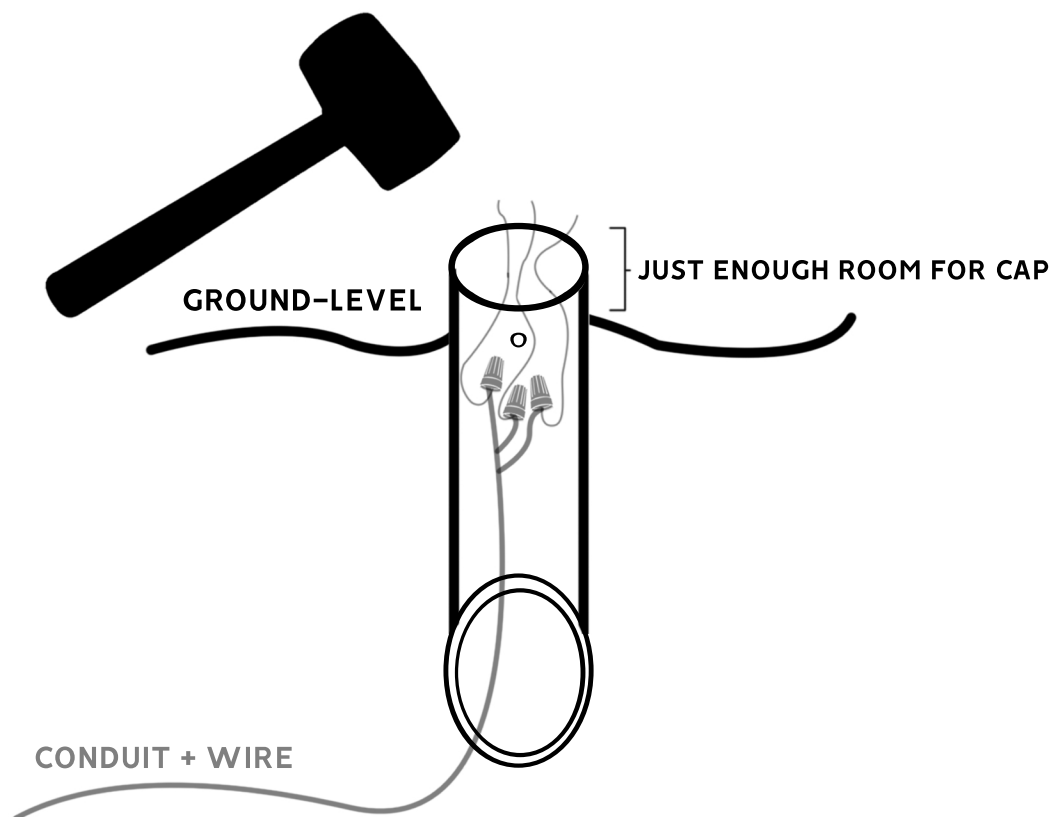


## INSTALL – THREAD CAP TO FIXTURE

4) Screw in threads clockwise

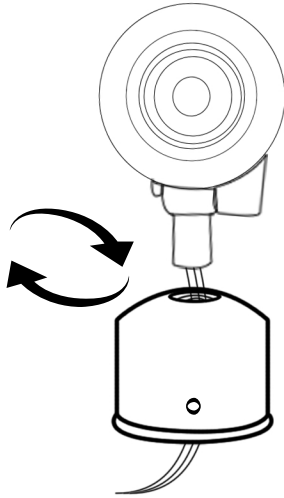

## INSTALL – CONNECT WIRES

5) Connect wires from the light fixture to the incoming wires in the conduit, push all connections into stake

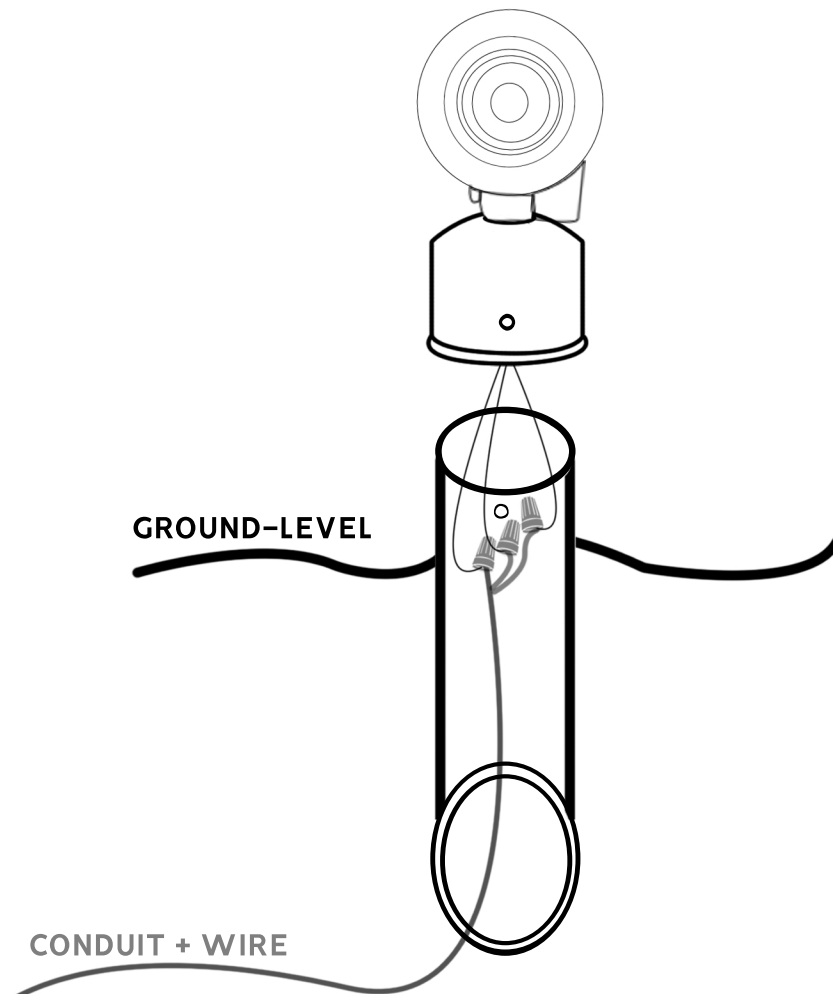



**INSTALL – SCREW IN TWO SCREWS**

6) Replace cap to the top of the stake and replace stake screws

**INSTALL – DIRECT SPOTLIGHT**

7) Direct spotlight where you want it and tighten 7/16" nut

